

## User's Guide

---

SP7-100

# SOLT



- Thank you for purchasing Solt wireless calling system products.
- Please read this user's guide carefully before using and follow the instructions.
- Specification and instructions are subject to change without notice.

## Contents

|  |       |
|--|-------|
| Important Safety Instructions .....  | 3     |
| Contents / Recharging Instructions .....                                   | 4     |
| Name of each part / Screen Layout (Idle screen) .....                      | 5     |
| Screen Layout (Receiving Screen / Cancel receiving screen ) .....          | 6     |
| List of setting modes .....  | 7     |
| 🕒 Time Setting .....   | 8     |
| 🔊 Sound / Vibration Setting .....  | 9     |
| 🆔 Bell ID Setting (1) New bell ID registration .....                       | 10~11 |
| (2) Calling number change .....  | 12    |
| (3) Whole calling number deletion .....                                    | 13    |
| ⚙️ Other Settings (1) STAT : Checking the detail set by Other Settings ... | 14    |
| (2) CONT : Adjusting the contrast of LCD screen .....                      | 15    |
| (3) DUPT : Duplicated receiving prevention time .....                      | 16    |
| (4) SOND : Number of call alarm repetition .....                           | 17    |
| (5) COPY : Registration transmission .....                                 | 18~19 |
| (6) NORX : Receiving restriction number .....                              | 20    |
| (7) RSSI : Receiving sensitivity check .....                               | 21    |
| (8) REMD : Unchecked calling number notification .....                     | 22    |

## Specification

|                 |   |
|-----------------|---|
| Model           | SP7-100   |
| Frequency (MHz) | 433.0500 ~ 434.7900                             |
| Freq Stability  | ±5 ppm  |
| Data Rate       | 1800 bps  |
| Channel space   | 12.5 KHz  |
| Modulation      | FSK (±3KHz)                                     |
| Sensitivity     | -118dBm (at Direct)                             |
| Power Supply    | DC 3.7V/250mA Li-Polymer Battery (Rechargeable) |
| Dimension (mm)  | 37W × 49L × 13.5H                               |
| Standby Time    | about 30 hours                                  |
| Antenna         | Helical (Internal)                              |


## Important Safety Instructions

Safety Instruction contains the information to prevent the unexpected risk or damage in advance by using the product in correct way and it should always be observed all the times.


**Warning** This is for the case with the possibility of serious injury or death if this is not observed.

**Caution** This is for the case with the possibility of minor injury or damage to the product if this is not observed.


Power precautions

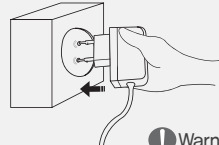

**Warning**  
Be sure to insert the power plug to the end of the inner part. [If the connection is unstable, it may cause fire.]

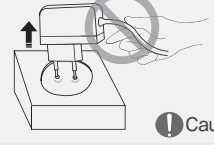


**Caution**  
Be sure to unplug the power plug while holding it firmly. If cord is unplugged by pulling out, some parts of the cord can be disconnected and it may cause risky situation. [It may cause fire.]

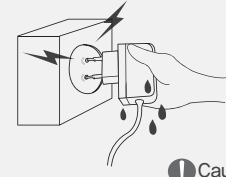


**Caution**  
Do not touch the power plug with wet hand. [There is a risk of electric shock.]


Use precautions

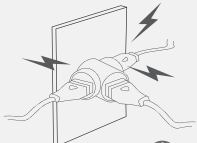

**Warning**  
Do not use one socket for multiple devices at the same time. [It may cause fire due to overheating of the socket.]

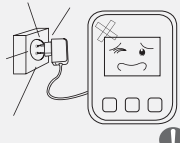


**Caution**  
If power plug is dropped or case is broken, unplug the power cord. [If it is used as it is, it may cause fire or electric shock. Please contact service center.]

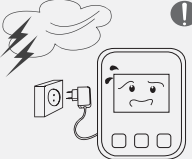


**Caution**  
In case of thunderstorm or lighting or if the power plug is not used for long time, unplug the power cord. [There is the risk of electric shock or fire.]


Use precautions



**Caution**  
Do not harm or damage the unit with sharp object such as nail, pencil, or pen. [It will damage the surface of the unit and cause malfunction.]

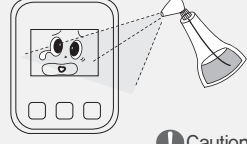


**Caution**  
Do not clean the unit with water, benzene or paint thinner. [Damage to the insulation of electrical parts may cause malfunction.]

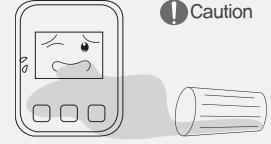


**Caution**  
If foreign object enters the unit, please contact service center. [This may cause damage to the internal parts.]


Use precautions



**Warning**  
Do not disassemble or modify the unit. If repair of the unit is required, please contact the service center.

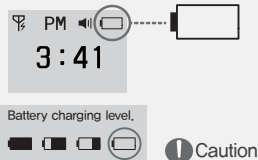


**Caution**  
When the battery icon indicates as marked in a circle, use it after recharging for more than 2 hours.



**Caution**  
Use the supplied adapter. [Malfunctioning of supplied adapter during its use is not covered by manufactures' warranty.]


## Contents

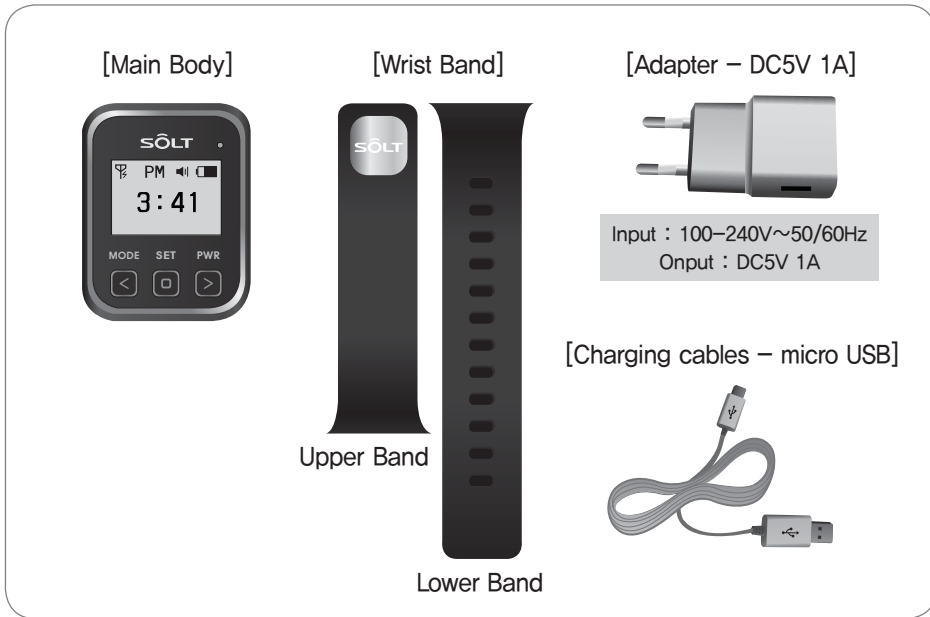 


## Recharging Instructions

※ Please use only supplied adaptor.

 Defect of the product caused by the use of other products will be repaired with charge. Limited accessory warranty. Malfunctioning of supplied adaptor during its use is not covered by manufactures' warranty.

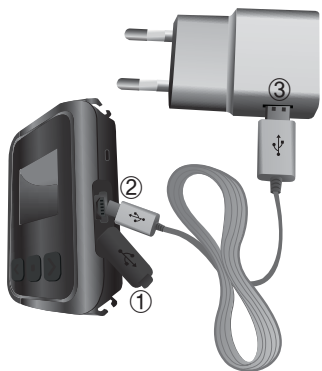

 - ① Open the USB cover of pager.
- ② Connect micro USB jack to the connector of pager.
- ③ Plug the cord into the outlet after connecting adaptor and USB cable.

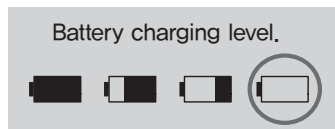

When the battery icon indicates as marked in a circle, use it after recharging for more than 2 hours.

## Name of each part

Wrist type upper band .....  
(How to combine main body and band :  
Push the band to the left fitting into the groove of main body.)

| Buttons                                       | Description   |
|---|---|
| <b>MODE</b> Press it more than 2 seconds      | Entering into Mode / Exit to idle screen<br>Conversion of numbers, English letters and special characters |
| <b>SET</b> Press it more than 2 seconds       | Move to upper mode  |
| <b>PWR</b> Press it more than 2 seconds       | Power ON/OFF  |
| <b>&lt;</b> <b>&gt;</b> Press it once shortly | Mode Shift, Digit Location Shift, Shift to receiving screen   |
| <b>SET</b> Press it once shortly              | Mode Selection, Setting Value Selection and Change  |



 
## Screen Layout

### Idle screen


Reception available AM/PM Sound Vibration Remaining battery



Current Time

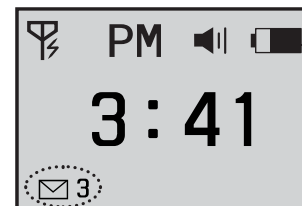

 ..... Unchecked call Icon, Number of Unchecked Calls

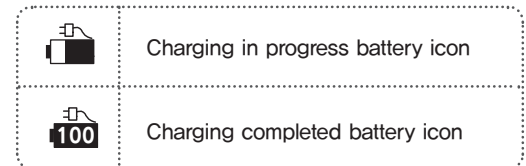


※ When there are unchecked calling numbers in idle screen, the number of unchecked calls is displayed.

When you press SET button at receiving screen, unchecked call icon is disappeared. When you check all received call numbers, only current time is displayed.


## Screen Layout
 
### Receiving Screen : Screen example of receiving number [A11]

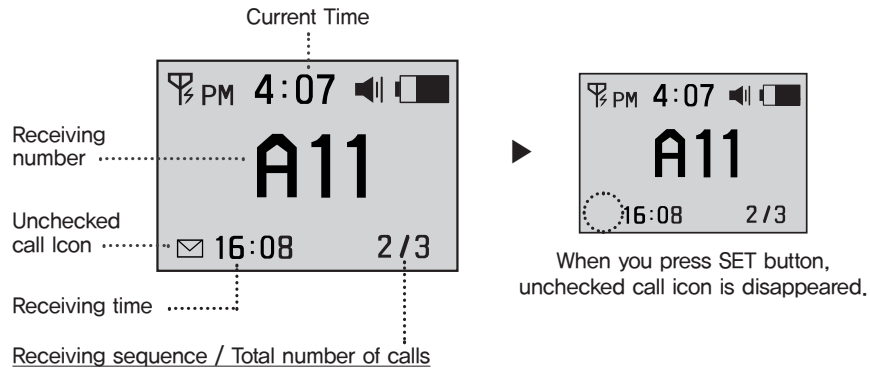

- [A11] calling number is displayed in the middle, and receiving time is displayed at left bottom.
- Total number of received calls and receiving sequence of calling numbers are displayed at right bottom. [A11] is secondly received number out of total 3 receiving numbers.
- Total 50 calling numbers can be stored.  
(When 51st calling number is received, 1st receiving calling number is disappeared.)

### Cancel receiving screen : Example screen of [A11] cancellation among receiving numbers

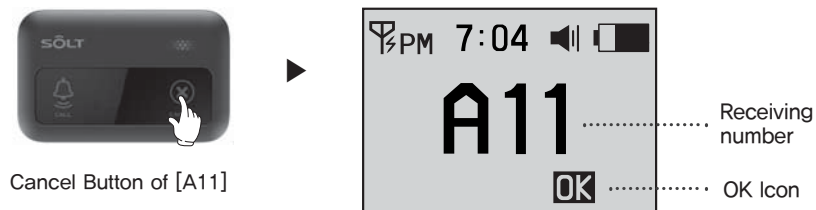 

- [A11] is displayed together with OK icon at right bottom.
- After cancellation, [A11] is deleted from receiving list, and total number of calls is decreased.

## List of setting modes

You can set following listed modes using set button of main body.

|  |                           |   |
|--|---------------------------|---|
|  | Time Setting              | · 24hours digital watch function  |
|  | Sound / Vibration Setting | · Call notification method setting  |
|  | Bell ID Setting           | · New bell ID registration<br>· Calling number change<br>· Whole calling number deletion  |
|  | Other Settings            | (1) STAT : Checking the detail set by Other Settings<br>(2) CONT : Adjusting the contrast of LCD screen<br>(3) DUPT : Duplicated receiving prevention time<br>(4) SOND : Number of call alarm repetition<br>(5) COPY : Registration transmission<br>(6) NORX : Receiving restriction number<br>(7) RSSI : Receiving sensitivity check<br>(8) REMD : Unchecked calling number notification |

### Entering into Setting Mode

You can enter into setting mode by pressing MODE button for more than 2 seconds at idle screen.



### Setting mode screen



 
※ Note: Calling signal cannot be received at setting mode.  
(Calling signal can be received at idle screen only.)

### Exit from setting mode to idle screen

If you press MODE button at setting mode screen for more than 2 seconds, Idle screen is displayed.



### Idle screen

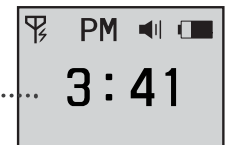

Current Time ..... 3:41


## Time Setting

 You can set the time of Pager.



- ① You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.





- ② After moving to using arrow keys, enter into setting mode by pressing SET button.

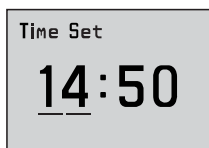

  - ③ Select 'Hour' using SET button and after setting 'Hour' using arrow keys, press SET button.

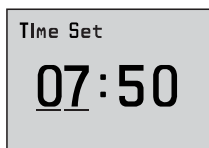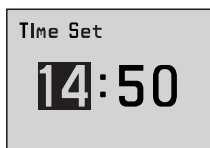

  - ④ Move cursor using arrow keys and select 'Minute' using SET button.

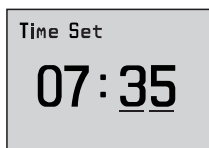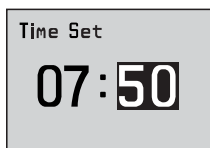


- ⑤ After setting 'Minute' using arrow keys, press SET button.

- ⑥ When you press SET button for more than 2 seconds, setting is completed.



 - ⑦ When you press MODE button for more than 2 seconds, idle screen is displayed.

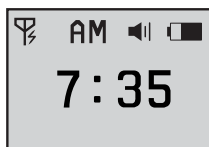


### ! Note

※ If battery is completely discharged and goes out, set time can be initialized.

## Sound / Vibration Setting

You can set sound or vibration when receiving calls.

 - ① You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.

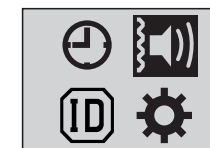

- ② After moving to using arrow keys, enter into setting mode by pressing SET button.

 


- ③ If you select Type using arrow keys, you can check sound or vibration.

- ④ When you press SET button for more than 2 seconds after selecting Type, setting is completed.



- ⑤ When you press MODE button for more than 2 seconds, idle screen is displayed.

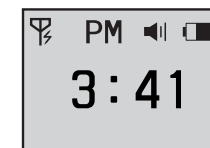

|  |                      |  |
|--|----------------------|--|
|  | Sound Mode           | Only sound output is made and there are ① ② ③ types.                             |
|  | Vibration Mode       | Only vibration output is made and there are ① ② ③ types.                         |
|  | Sound/Vibration Mode | Sound and vibration outputs are made at the same time and there are ① ② ③ types. |


### ! Note

 ※ Cancel reception notifying methods(sounds/vibrations) are fixed depending on each [sound mode, vibration mode, sound/vibration mode].


# ID New bell ID registration

## (1) New bell ID registration (Available number of calling bell registration: about 900)


① You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.

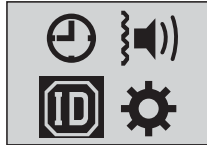

  ② After moving to **ID** using arrow keys, enter into setting mode by pressing SET button.

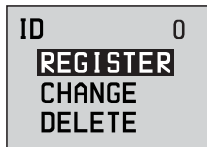



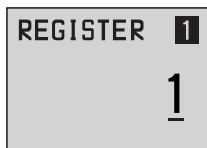



③ Enter into **REGISTER** Mode using SET button.



④ When calling bell that is to be registered as No.1 is pressed, it is registered with 'beep' sound. Number of cursor location is changed to '2', and when calling bell that is to be registered as No.2 is pressed, it is registered. Thus each time next calling bell is pressed in order, sequential registration is made from No.1.

(④-1) If you want to change to other characters, refer to following table.

|  |  |
|--|--|
| Character Change                       | <p>When character inversion is made by pressing SET button, you can select other characters using arrow keys.</p> <p>[Character Inversion]  → </p>   |
|  | <p>When you press MODE button for more than 2 seconds, you can select (Numbers, English Lower Case Letters, English Capital Letters, Special Characters).</p> <p>   </p> |
| Digit Location Shift (Cursor Movement) | You can move cursor location using arrow keys.   |

Registered total number of calling bells,

 


⑤ When you press SET button for more than 2 seconds, registration is completed and returns to previous stage.

⑥ When pressing SET button for more than 2 seconds, it returns to previous stage.



⑦ When you press MODE button for more than 2 seconds, idle screen is displayed.

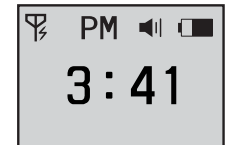



### ※ Expressible Characters

|                                      |                            |
|--------------------------------------|----------------------------|
| Numbers                              | 1234567890                 |
| English Letters (Lower case letters) | abcdefghijklmnopqrstuvwxyz |
| English Letters (Capital Letters)    | ABCDEFGHIJKLMNOPQRSTUVWXYZ |
| Special Characters                   | ? - _ / , . : ■ (Blank)    |

## ID Calling Number Change



### (2) Calling Number Change (Mode that changes registered calling number)

  - You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.
- After moving to **ID** using arrow keys, enter into setting mode by pressing SET button.
- Move to **CHANGE** mode using arrow keys and enter into change mode by pressing SET button.
  - 'Press Bell' is displayed.

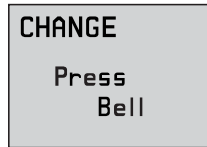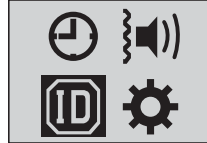


Example: Change [A1] to [C-5].

  - When you press calling bell that you want to change among registered calling bells, relevant number is displayed with 'beep' sound.
- After changing to desired characters, when you press SET button for more than 2 seconds, changed number is stored and 'Press Bell' is displayed.

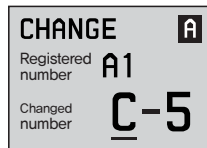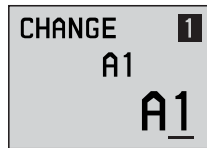

(Refer to 'New Calling Number Registration (4-1)' for character change method.)

 
- If you want to change other calling number, repeat ④~⑤ process.
- When pressing SET button for more than 2 seconds, it returns to previous stage.
- When pressing SET button for more than 2 seconds, it returns to previous stage.
- When you press MODE button for more than 2 seconds, idle screen is displayed.

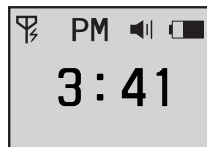

## ID Whole calling number deletion


### (3) Whole calling number deletion (Mode that deletes all registered calling numbers)

 - You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.
- After moving to **ID** using arrow keys, enter into setting mode by pressing SET button.
- Move to **DELETE** mode using arrow keys and enter into change mode by pressing SET button.
- If you want whole deletion, move to [YES] and press SET button. If you want to cancel whole deletion, move to [NO] and press SET button.
- When you make whole deletion, registered all calling numbers are deleted, therefore, you need to check one more time. If you want whole deletion, move to [YES] and press SET button.


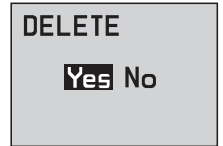


Registered total number of calling bells.

 - After 'beep' sound is made, whole deletion is completed and returns to previous stage. Number of registered calling bells becomes '0'.

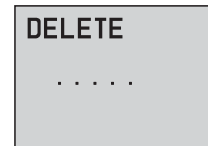

  
- When pressing SET button for more than 2 seconds, it returns to previous stage.
- When you press MODE button for more than 2 seconds, idle screen is displayed.

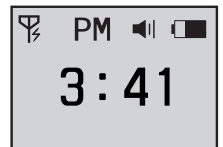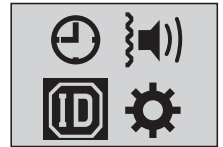


## Other Settings

|             |      |
|-------------|------|
| <b>STAT</b> | CONT |
| DUPT        | SOND |
| COPY        | NORX |

### (1) Checking the detail set by Other Settings

 - ① You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.
- ② After moving to  using arrow keys, enter into setting mode by pressing SET button.
- ③ Move to **STAT** mode using arrow keys and enter into change mode by pressing SET button.

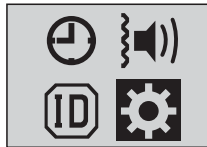


|             |      |
|-------------|------|
| <b>STAT</b> | CONT |
| DUPT        | SOND |
| COPY        | NORX |

|                      |   |
|----------------------|---|
| <b>RN: 032 / 005</b> | ... Total registered bells(32 bells) / Receiving-restricted bells(5 bells)          |
| <b>AR: 001</b>       | ..... Number of call alarm repetition : call to be alarmed one(1) time              |
| <b>DT: 003</b>       | ..... When receiving same calling numbers for 3 seconds, it is displayed only once. |
| <b>BT: 3833 3299</b> | ... Battery calibration value(Only for manufacturer's checking purpose)             |


- ④ When pressing SET button for more than 2 seconds, it returns to previous stage.

|             |      |
|-------------|------|
| <b>STAT</b> | CONT |
| DUPT        | SOND |
| COPY        | NORX |

 - ⑤ When pressing SET button for more than 2 seconds, it returns to previous stage.

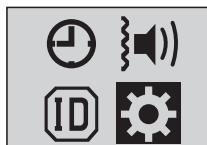

 
- ⑥ When you press MODE button for more than 2 seconds, idle screen is displayed.

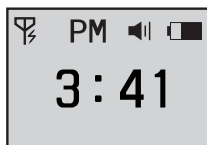


## Other Settings

|      |             |
|------|-------------|
| STAT | <b>CONT</b> |
| DUPT | SOND        |
| COPY | NORX        |


### (2) Adjusting the contrast of LCD screen

 - ① You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.
- ② After moving to  using arrow keys, enter into setting mode by pressing SET button.
- ③ Move to **CONT** mode using arrow keys and enter into change mode by pressing SET button.

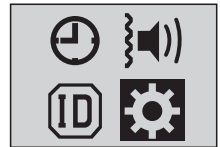

|      |             |
|------|-------------|
| STAT | <b>CONT</b> |
| DUPT | SOND        |
| COPY | NORX        |

 
- ④ Set desired value using arrow keys. (default setting value is 10.) You can select it from 00 to 20.

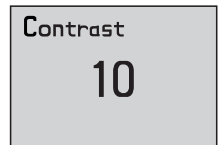


- ⑤ When pressing SET button for more than 2 seconds, it returns to previous stage.

|      |             |
|------|-------------|
| STAT | <b>CONT</b> |
| DUPT | SOND        |
| COPY | NORX        |

 - ⑥ When pressing SET button for more than 2 seconds, it returns to previous stage.

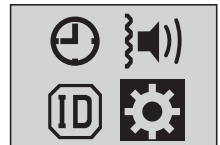

 - ⑦ When you press MODE button for more than 2 seconds, idle screen is displayed

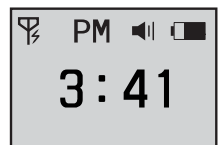




## Other Settings

|             |      |
|-------------|------|
| STAT        | CONT |
| <b>DUPT</b> | SOND |
| COPY        | NORX |

(3) Duplicated receiving prevention time  
(When receiving same calling numbers, it allows only one reception during set time period.)

 ① You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.

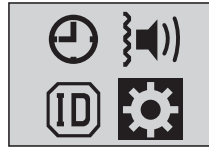

② After moving to  using arrow keys, enter into setting mode by pressing SET button.

③ Move to **DUPT** mode using arrow keys and enter into change mode by pressing SET button.

|             |      |
|-------------|------|
| STAT        | CONT |
| <b>DUPT</b> | SOND |
| COPY        | NORX |


④ Set desired value using arrow keys.  
Initial setting value is [03] and 3 seconds (setting range: 00~99).  
(When receiving same calling numbers for 3 seconds, it is displayed only once.)

|               |
|---------------|
| DUPT          |
| <b>03</b> sec |

⑤ When you press SET button for more than 2 seconds, storing is completed and returns to previous stage.

|             |      |
|-------------|------|
| STAT        | CONT |
| <b>DUPT</b> | SOND |
| COPY        | NORX |

 ⑥ When pressing SET button for more than 2 seconds, it returns to previous stage.

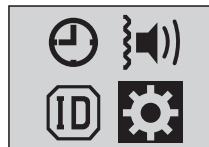

⑦ When you press MODE button for more than 2 seconds, idle screen is displayed.


|             |   |
|-------------|---|
| PM          | 🔋 |
| <b>3:41</b> |   |

## Other Settings
 
|      |             |
|------|-------------|
| STAT | CONT        |
| DUPT | <b>SOND</b> |
| COPY | NORX        |

(4) Number of call alarm repetition  
(It is a function that sets repeated numbers of sound or vibration for calls.)

① You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.

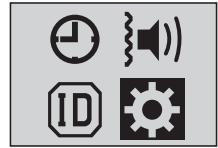

② After moving to  using arrow keys, enter into setting mode by pressing SET button.

③ Move to **SOND** mode using arrow keys and enter into change mode by pressing SET button.

|      |             |
|------|-------------|
| STAT | CONT        |
| DUPT | <b>SOND</b> |
| COPY | NORX        |


④ Set desired value using arrow keys.  
· Initial setting value is [01] and it means one time notification against a call. (setting range: 00~99)  
· When setting as [00], receiving notification is repeated continuously, and when pressing any button, receiving notification stops.

|                 |
|-----------------|
| Alarm Repeat    |
| <b>01</b> Times |

⑤ When you press SET button for more than 2 seconds, storing is completed and returns to previous stage.

|      |             |
|------|-------------|
| STAT | CONT        |
| DUPT | <b>SOND</b> |
| COPY | NORX        |

 ⑥ When pressing SET button for more than 2 seconds, it returns to previous stage.

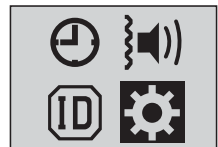

⑦ When you press MODE button for more than 2 seconds, idle screen is displayed.


|             |   |
|-------------|---|
| PM          | 🔋 |
| <b>3:41</b> |   |

## Other Settings
 
|             |      |
|-------------|------|
| STAT        | CONT |
| DUPT        | SOND |
| <b>COPY</b> | NORX |

(5) Registration transmission  
(Function that duplicates registered all calling numbers to other pagers.)

- Connect 2 pagers using dedicated cable.  
(Transmission time varies depending on the registered capacity.)

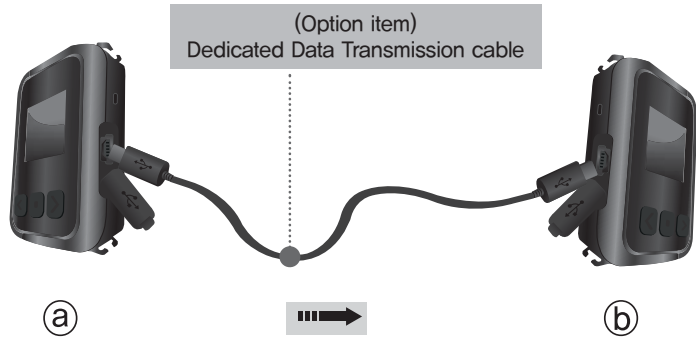

a Pager screen that transmits data  
(Refer to following sequence.)

b Pager screen that receives data  
(The registered Bell IDs are deleted.)  
: Data can be transmitted only in idle mode.

- You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.





- After moving to  using arrow keys, enter into setting mode by pressing SET button.

- Move to **COPY** mode using arrow keys and enter into change mode by pressing SET button.

|             |      |
|-------------|------|
| STAT        | CONT |
| DUPT        | SOND |
| <b>COPY</b> | NORX |

  
- When you press SET button, transmission starts, and when transmission is completed, 'OK' icon is displayed.

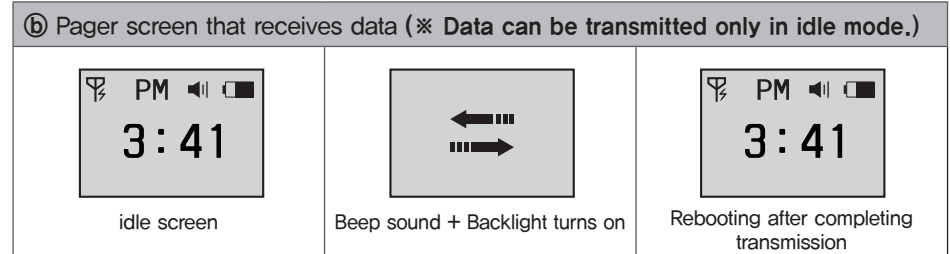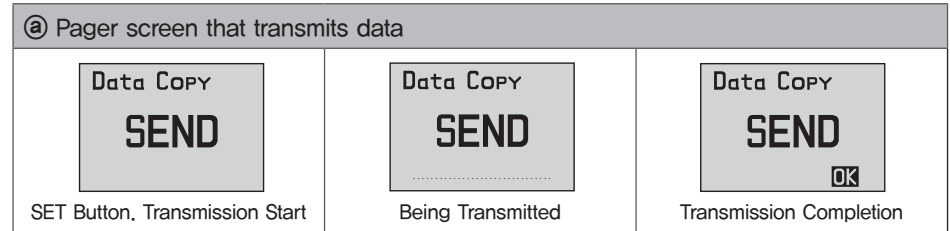

- When pressing SET button for more than 2 seconds, it returns to previous stage.

|             |      |
|-------------|------|
| STAT        | CONT |
| DUPT        | SOND |
| <b>COPY</b> | NORX |

 
- When pressing SET button for more than 2 seconds, it returns to previous stage.

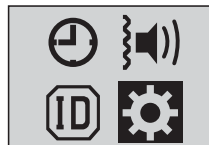

- When you press MODE button for more than 2 seconds, idle screen is displayed.

|             |      |
|-------------|------|
| STAT        | CONT |
| DUPT        | SOND |
| <b>COPY</b> | NORX |

 \* When the cable is not connected well or when the mode of a receiving pager is not idle one.

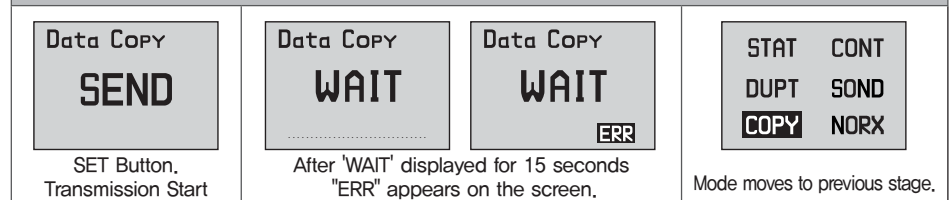


## Other Settings

STAT CONT  
DUPT SOND  
COPY **NORX**

(6) Receiving restriction number  
(Function that sets unwanted receiving number out of registered calling numbers.)

① You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.



② After moving to  using arrow keys, enter into setting mode by pressing SET button.

STAT CONT  
DUPT SOND  
COPY **NORX**

③ Move to **NORX** mode using arrow keys and enter into change mode by pressing SET button.

④ After searching unwanted receiving number using arrow keys, when you press SET button, it is set as no-reception [NoRx]. When you press SET button once again, it is set as reception [Rx]. (Initial setting value is reception [Rx].)

 
NoRx Setup  
T-9  
028 **NoRx**

Pager does not receive call from [T-9].



⑤ When you press SET button for more than 2 seconds, storing is completed and returns to previous stage.

STAT CONT  
DUPT SOND  
COPY **NORX**

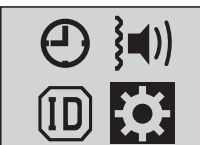⑥ When pressing SET button for more than 2 seconds, it returns to previous stage.



⑦ When you press MODE button for more than 2 seconds, idle screen is displayed.

PM    
3:41

## Other Settings

**RSSI** REMD

(7) Receiving sensitivity check  
(Function that checks receiving signal strength.)

① You can enter into Setting Mode by pressing MODE button for more than 2 seconds at idle screen.



② After moving to  using arrow keys, enter into setting mode by pressing SET button.

**RSSI** REMD

③ Move to **RSSI** mode using arrow keys and enter into change mode by pressing SET button.

④ When you press a calling bell, you can check receiving signal strength.

RSSI  
- 63 dBm



⑤ When pressing SET button for more than 2 seconds, it returns to previous stage.

**RSSI** REMD

⑥ When pressing SET button for more than 2 seconds, it returns to previous stage.



⑦ When you press MODE button for more than 2 seconds, idle screen is displayed.

PM    
3:41



**SÔLT**